



UPIC: Pioneer / PPAI 113823
ASI 78200

AdCooler™ Sports Toss Cooler User Manual

AdCooler Sports Toss Coolers are packaged in one, easy-to-handle, carrying case. Each comes complete with one compressed, square, fabric cooler; one collapsible metal cooler stand; two fiberglass poles; one net, ball bag; three sports balls; and one backboard game with attached ball net.



Set Up

- 1 Partially open the metal stand and insert the fabric cooler bag corners into the four vertical poles. Open the stand completely so the cooler sits taut on the stand.
- 2 Slip the two fiberglass poles into the side channels of the backboard game.
- 3 Slip the exposed portion of the fiberglass poles into the two fabric channels on the back of the cooler.
- 4 Attach the exposed Velcro® pieces at the bottom center of the backboard game to the Velcro pieces at the back center of the cooler for a secure fit.
- 5 Make sure the net drawstring bag (located behind the backboard) is closed at the bottom before you begin to play.
- 6 Place your net ball bag on the hook, located on one of the back corners of the cooler.

Take Down

- ❶ Remove the backboard from the cooler by lifting the two fiberglass poles from the back channels of the cooler.
- ❷ Remove the fiberglass poles from the fabric backboard.
- ❸ Remove the net ball bag from the side of the cooler.
- ❹ Empty the contents of the cooler, and make sure it is dry before packing.
- ❺ Lift the cooler from the metal stand by sliding it off the stand's four metal poles.
- ❻ Collapse the stand and put everything back into the carrying case.

Maintenance

Storage

Make sure the AdCooler Sports Toss Cooler is completely dry before storing. **DO NOT STORE WET OR DAMP.** Storing the cooler wet or damp will cause odors and mildew.

Cleaning

If necessary, gentle cleaning can be done with a mild liquid soap and a clean cloth or sponge. **DO NOT SCRUB FABRIC.** Take special care when cleaning graphic areas.